

A&N Model Trucks



Aussie Titan truck
(sleeper cab)

Made in Latvia

Warning!

Read carefully this instruction and please follow it during assembling, otherwise you could face problems with assembling the model.

Photo-etched parts have sharp edges, please be careful.


This model kit contains very small parts and is not suitable for children.

This model kit is for advanced modellers only!

Symbols:

 - glue parts;

 - do not glue parts;

 - bend parts;

 - attention;

 - moving parts;


 - your choice;

 - cut;


A1 - apertures' number;

Basic dimentions for Italeri's donor chassis.

1. Wheelbase.

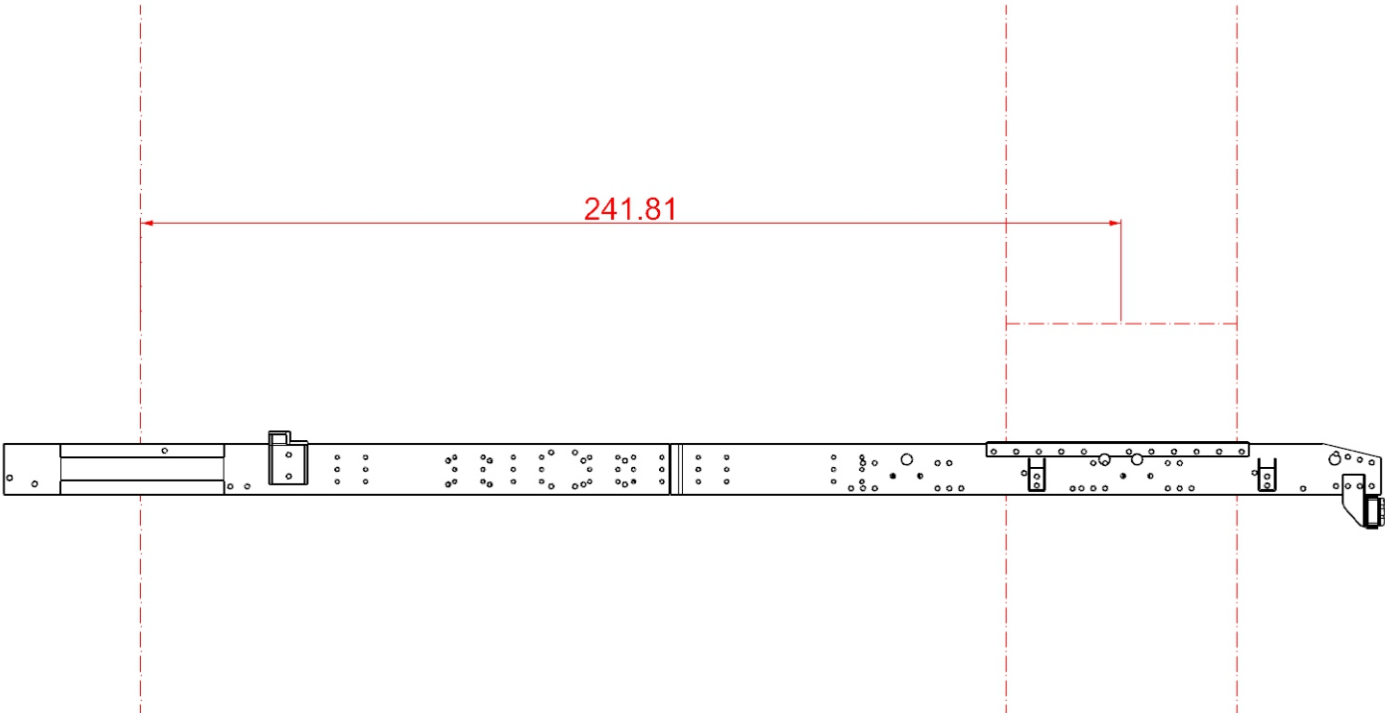


2. From front end of the frame to centers of front wheels.

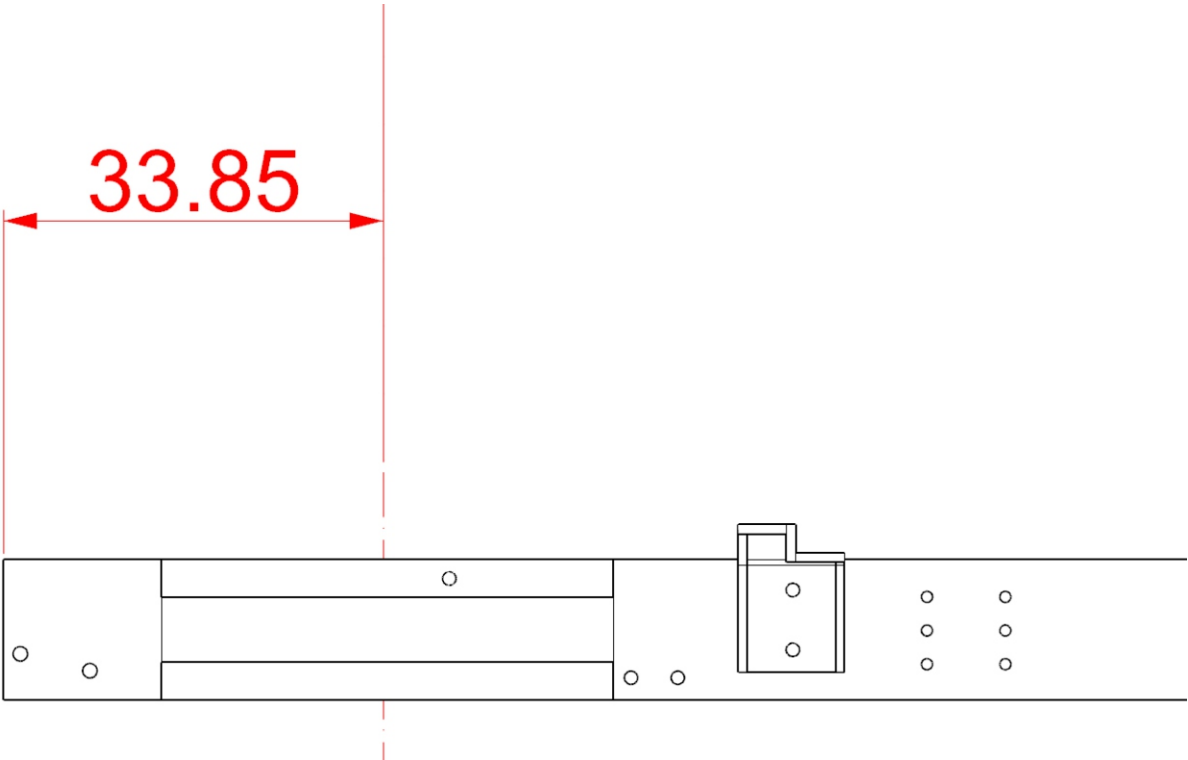


Aussie Titan truck (sleeper cab)


3. From front end of the frame to front end of cab's supports' brackets.

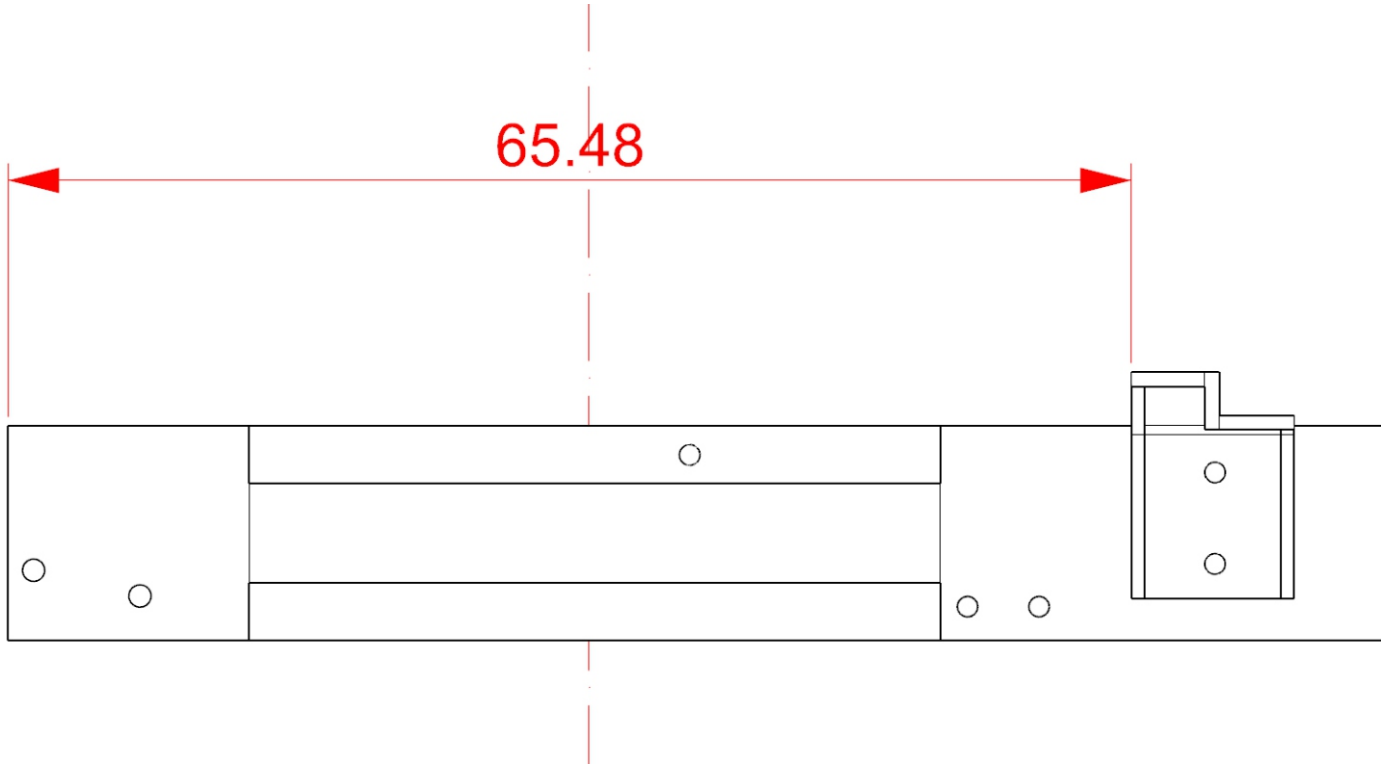

Aussie Titan truck (sleeper cab)


A&N Model Trucks chassis kit.

1.  x10

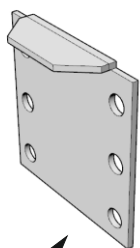


PE-part #19

2.  x10

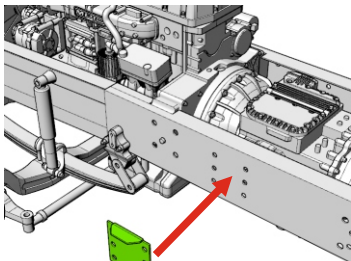

A8.


3.  x10

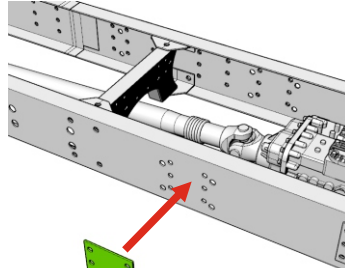


A23.

PE-part #35

4.  x10

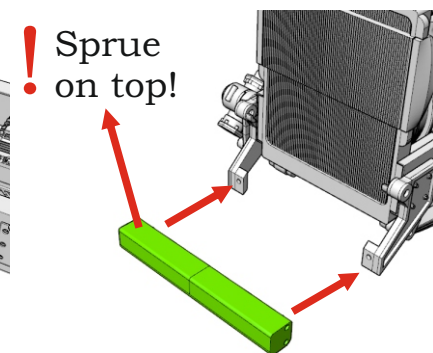


5.  x10




PE-parts #45, 46

6.  x10

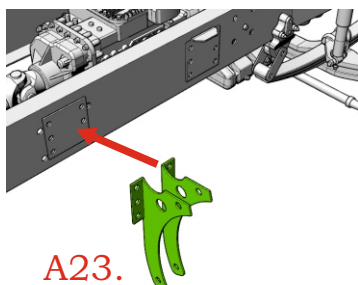


A23.

7.  x10




PE-part #32

8.  x10

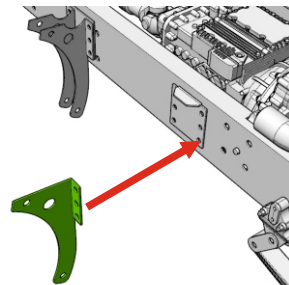


9.  x10

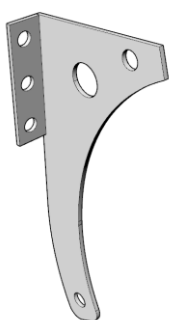


PE-part #33

10.  x10

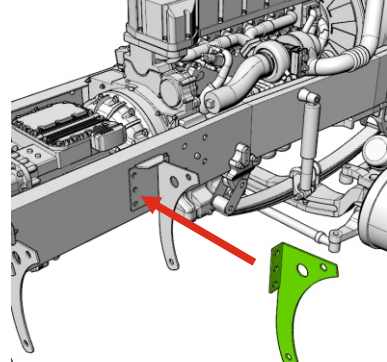


11.  x2

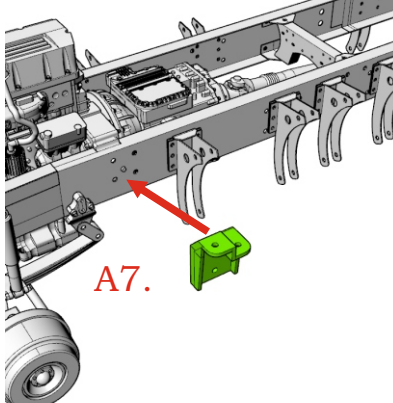


A7.


12.  x2

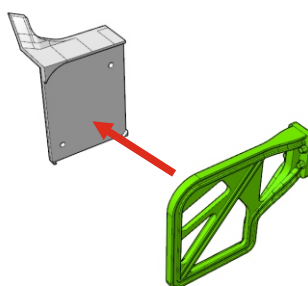


13.  x2

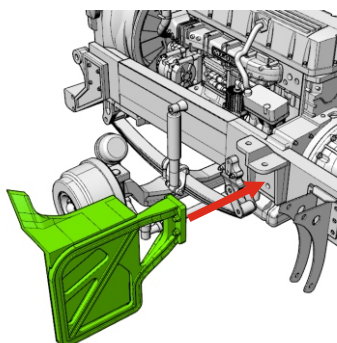

14.  x2

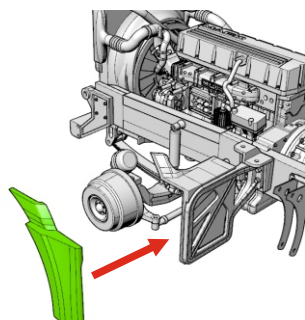


15.  x1


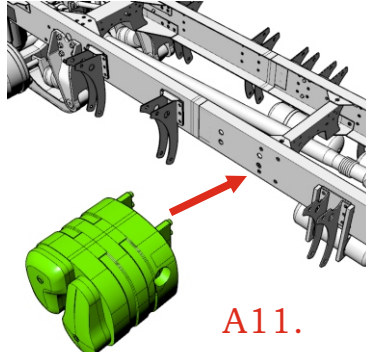





A11.

16.  x1

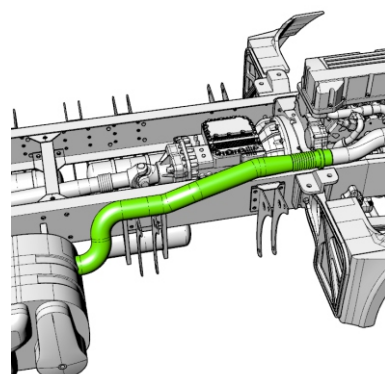

Aussie Titan truck (sleeper cab)


17.  x5
18.  x4
19.  x5
20.  x4

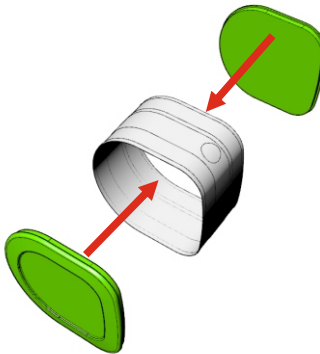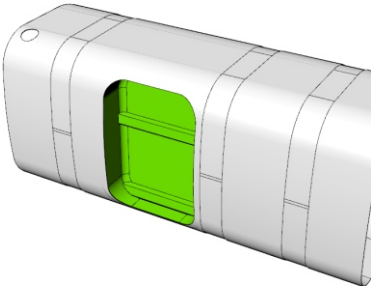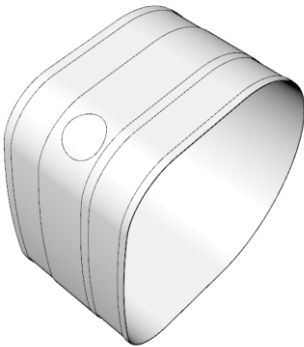


PE-part #26

PE-parts #22,
23, 24, 40, 41

21.  x4

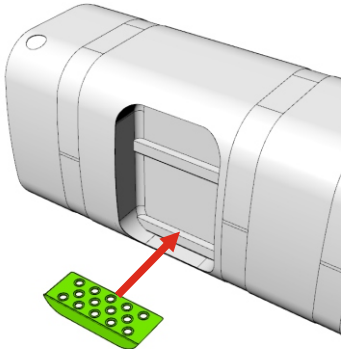


22.  x4

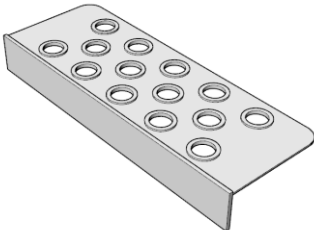


PE-part #27


23.  x4

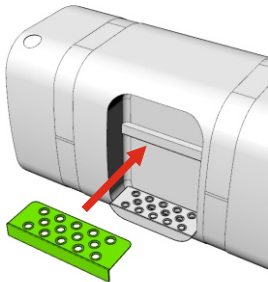


24. 

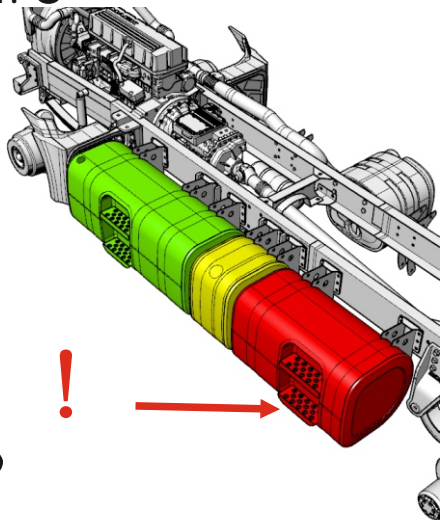


25. 

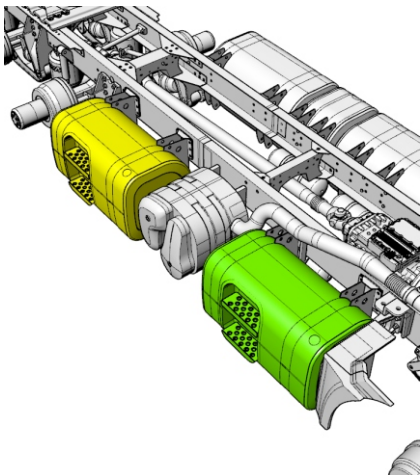

26.  x4

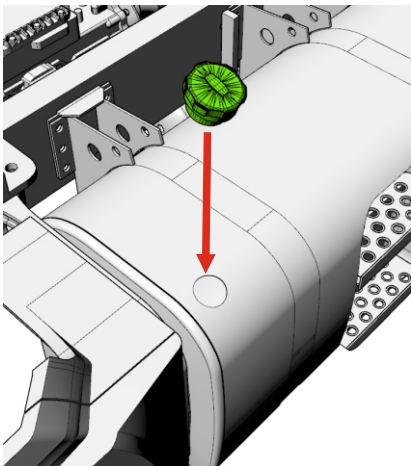


27. 

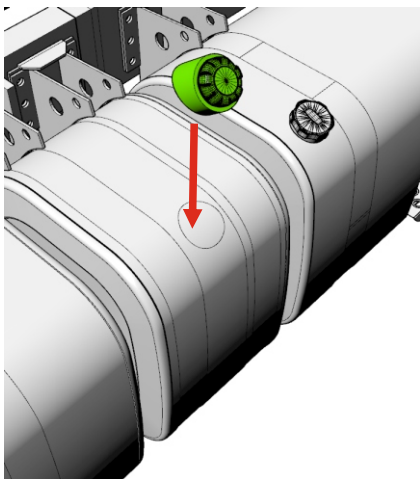


Aussie Titan truck (sleeper cab)

28. 

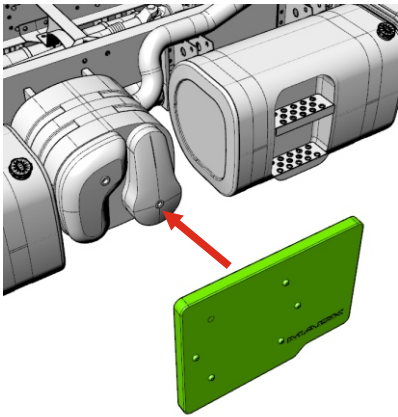


29.  x4

PE-part #28

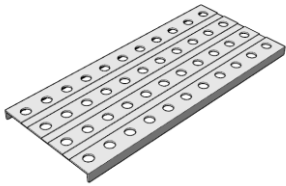


30.  x8

PE-part #30

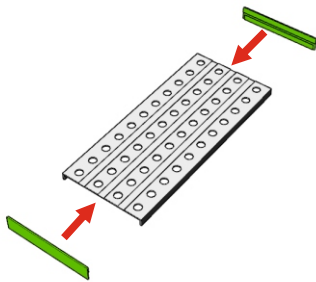


31.  x11

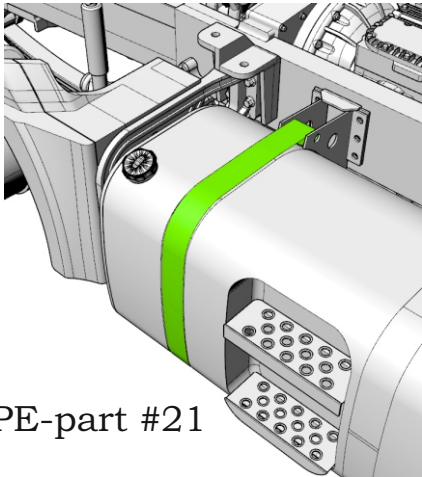


PE-part #21

32. 

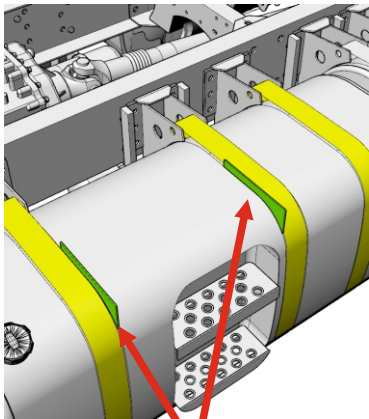


PE-part #31

33. 

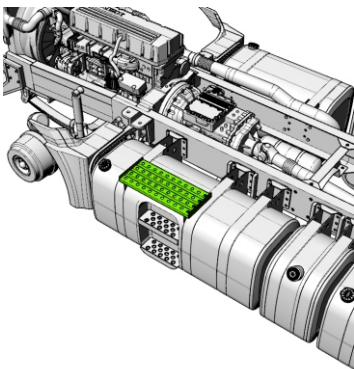


34.  x3

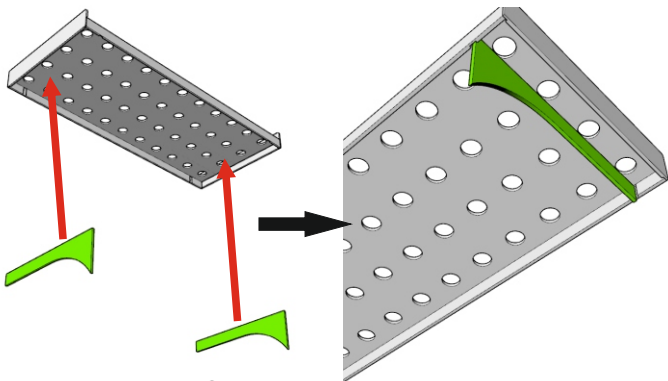


PE-part #31


35. 

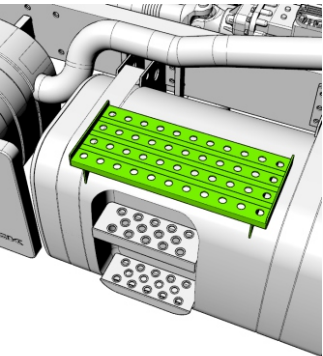


36.  x2

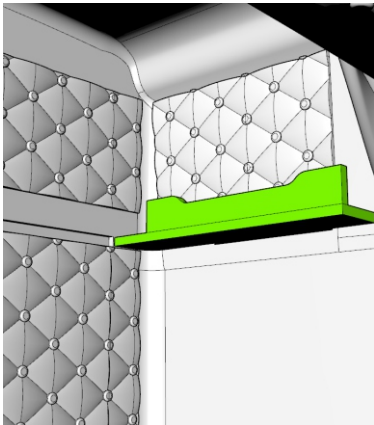

37. 

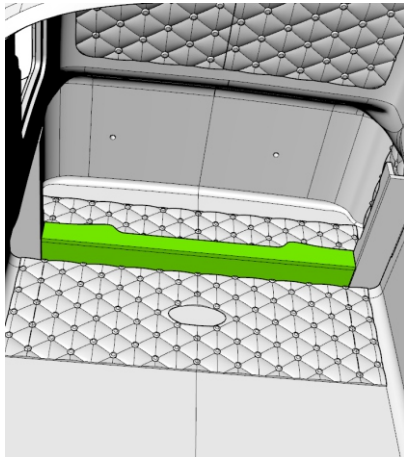


38. 

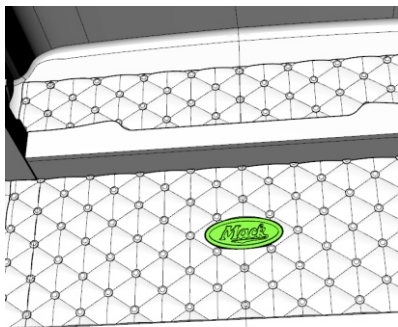


PE-part #42


39. 

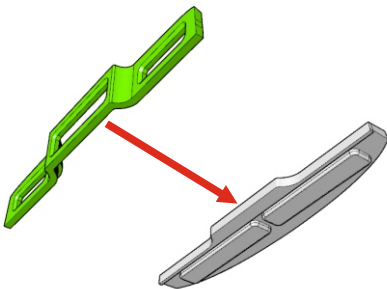

40. 

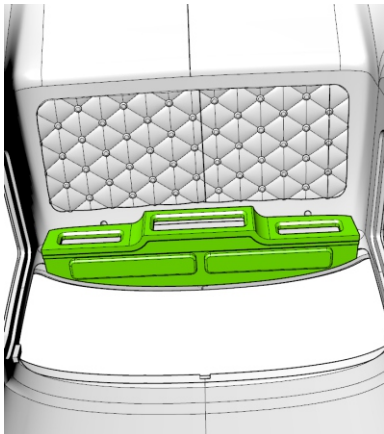


41.  x2

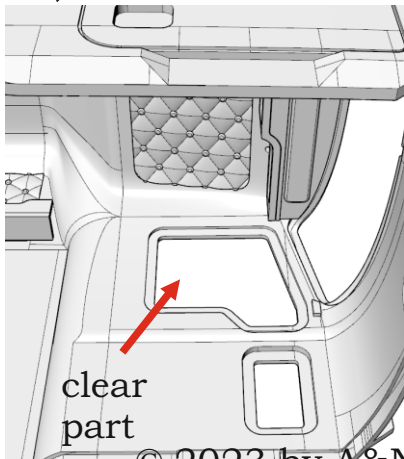


clear part

Aussie Titan truck (sleeper cab)

42.  x2

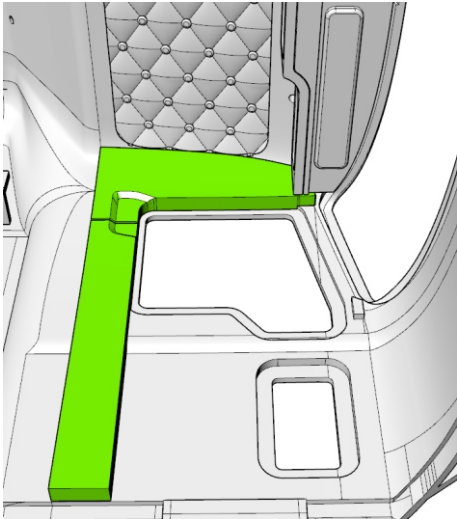


43. 

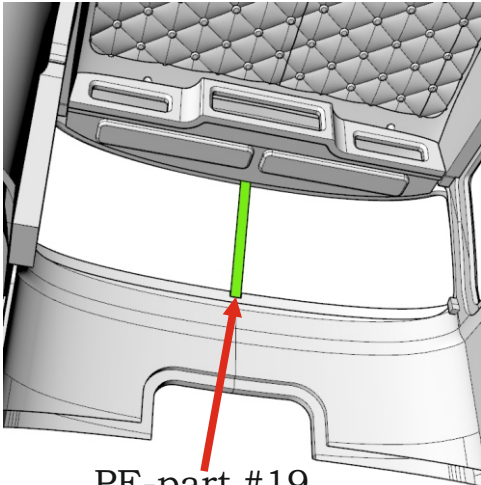


PE-part #19

44. 

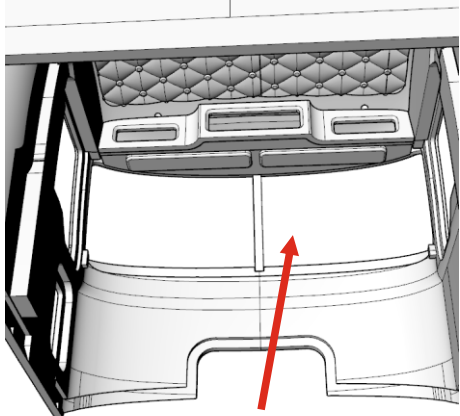


vac-formed
windscreen

45. 

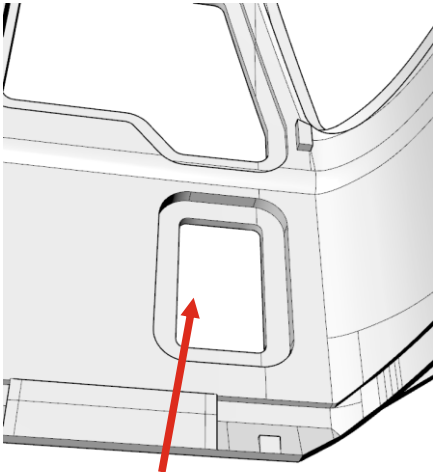


clear part

46.  x2

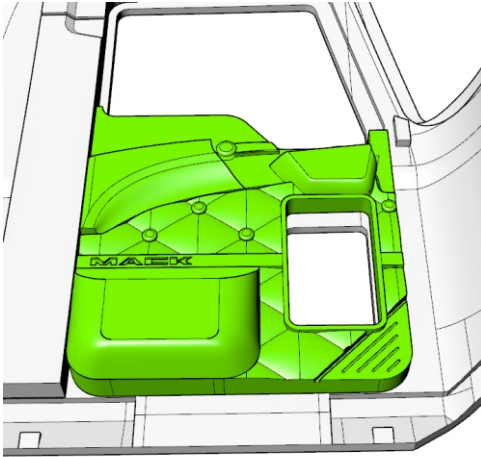


47. 

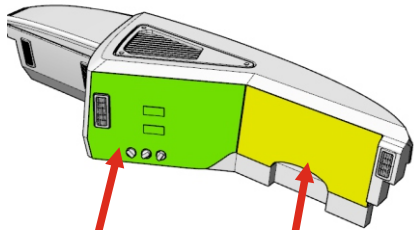

PE-part #44

PE-part #45


48. 

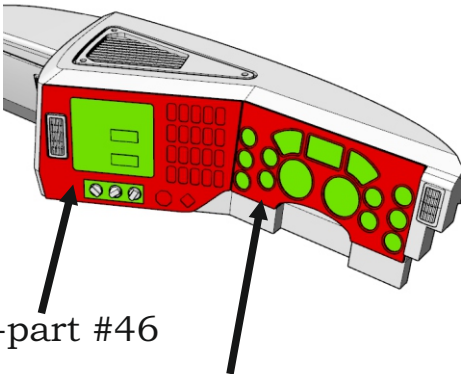

PE-part #46


PE-part #47

49. 

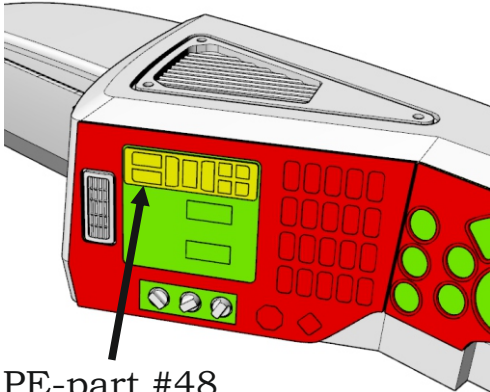

PE-part #48


50. 

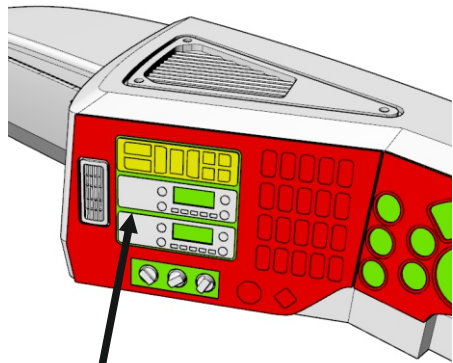


PE-part #49

Aussie Titan truck (sleeper cab)

51. ⬇

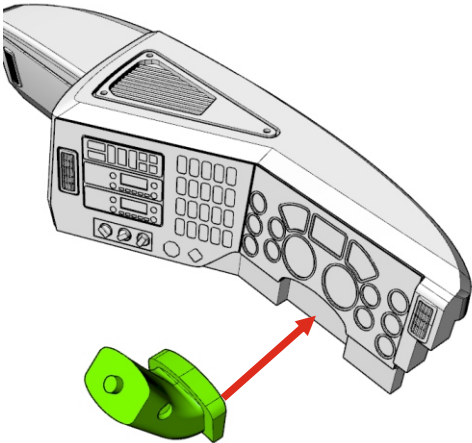


52. ⬇

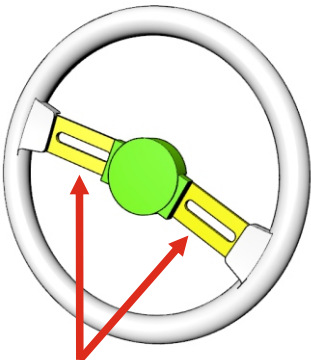


PE-part #18

53. ⬇

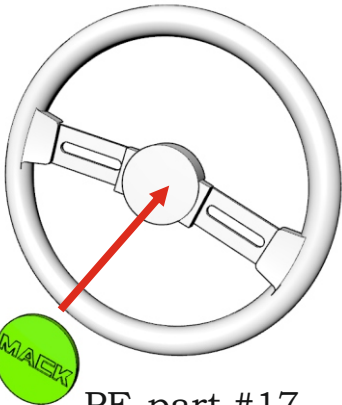


PE-part #17


54. ⬇

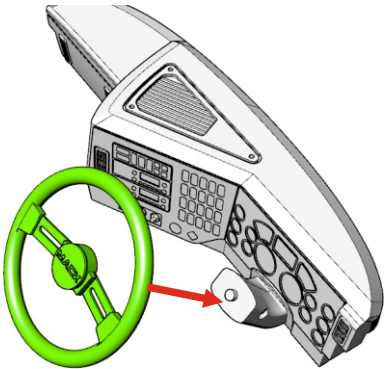

55. ⬇

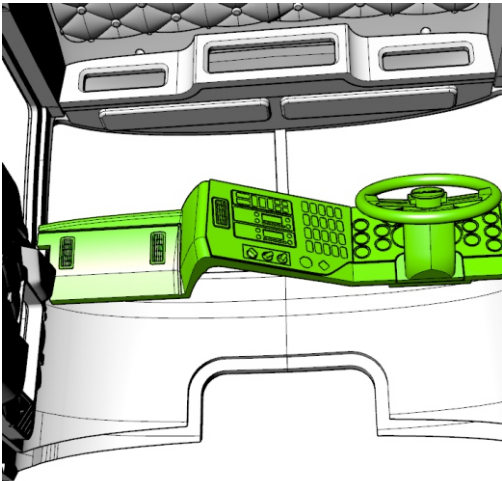


!


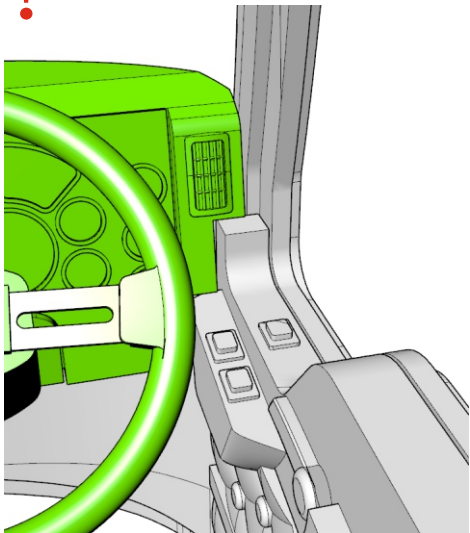


56. ⬇










57. ⬇

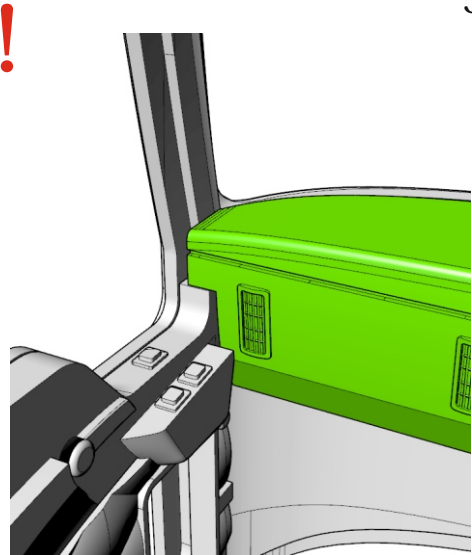











PE-part #12

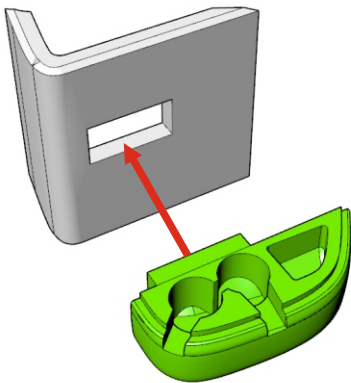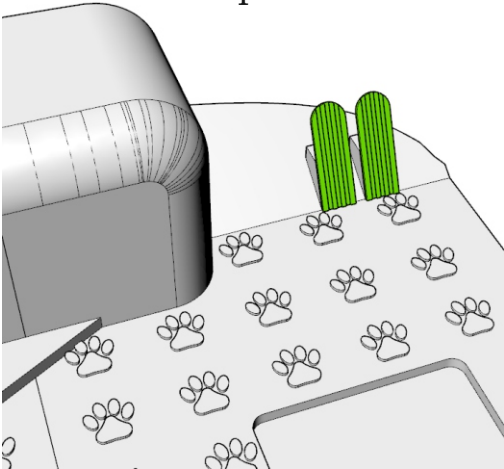

Aussie Titan truck (sleeper cab)

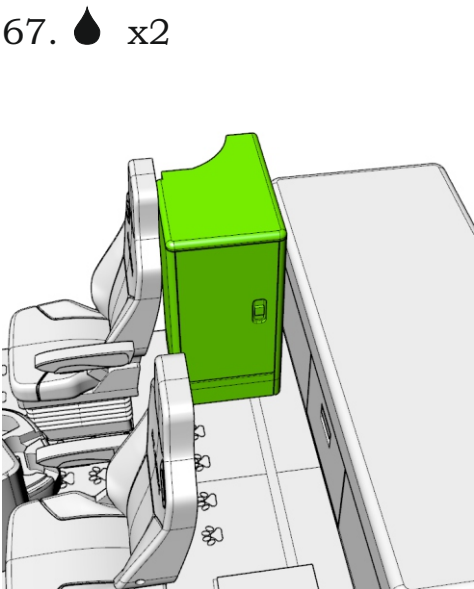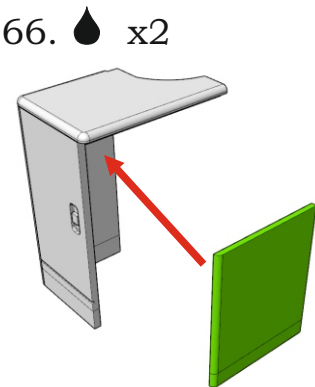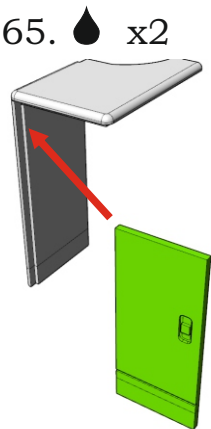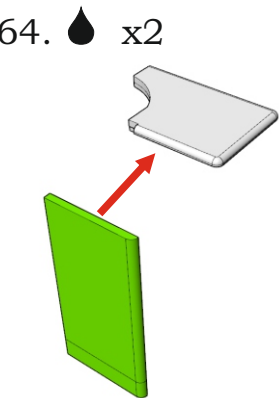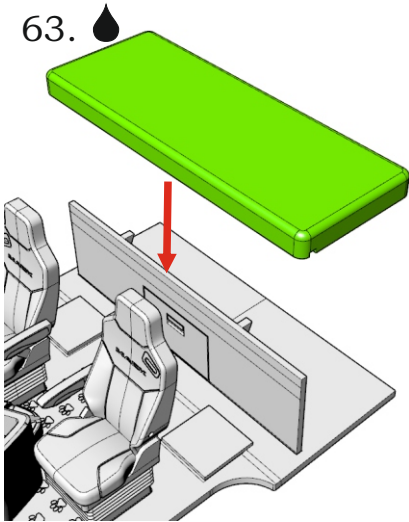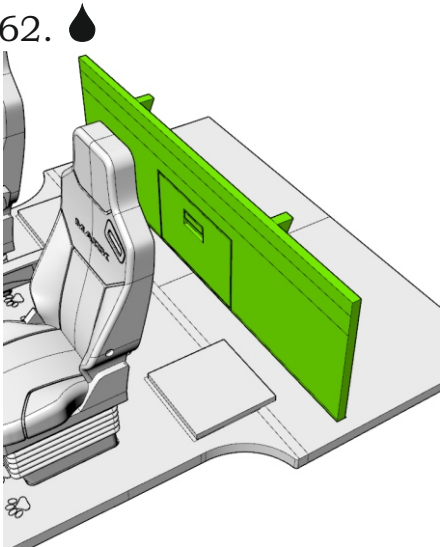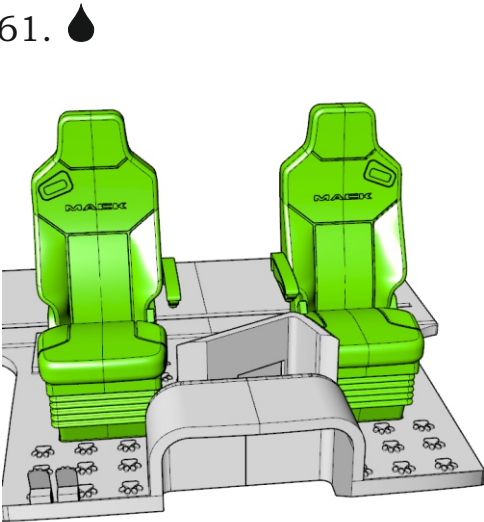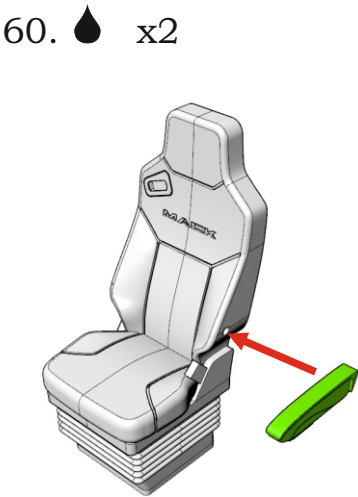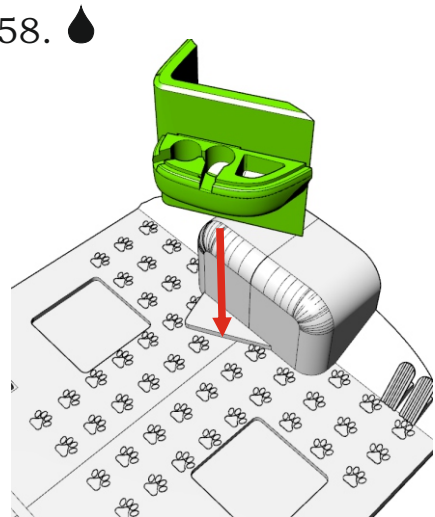


Aussie Titan truck (sleeper cab)

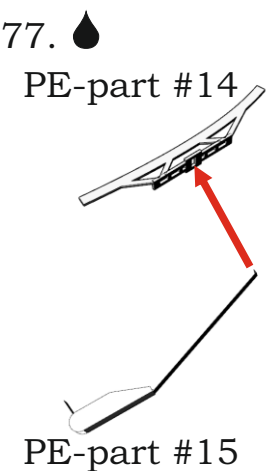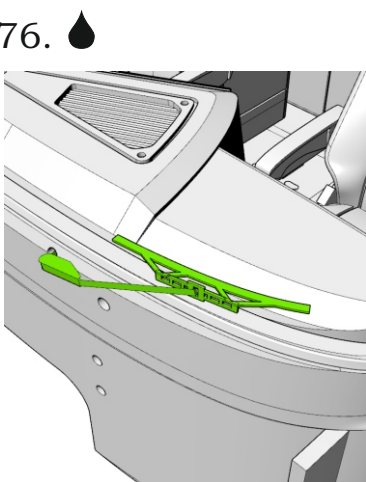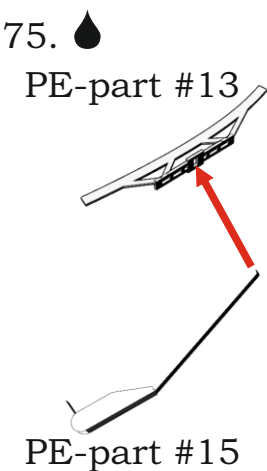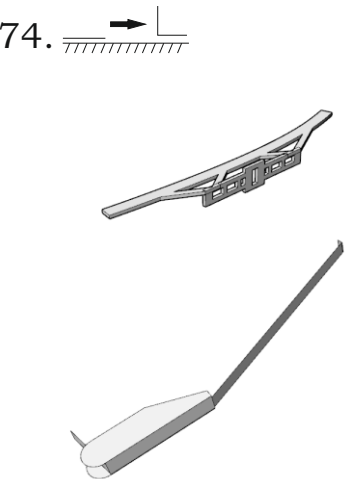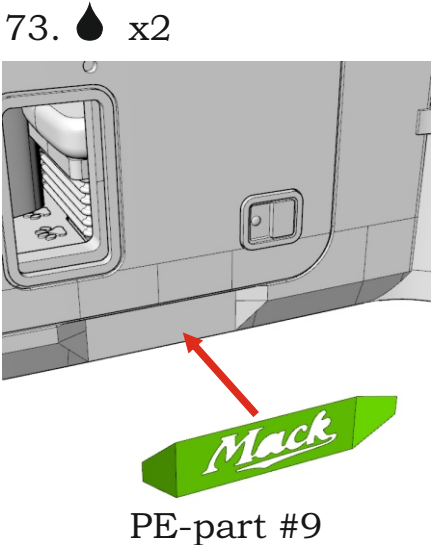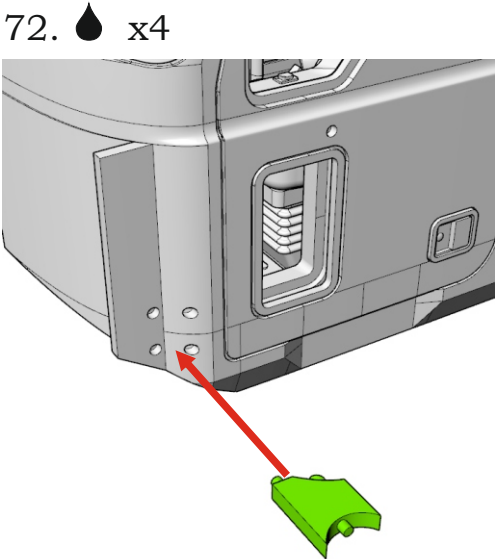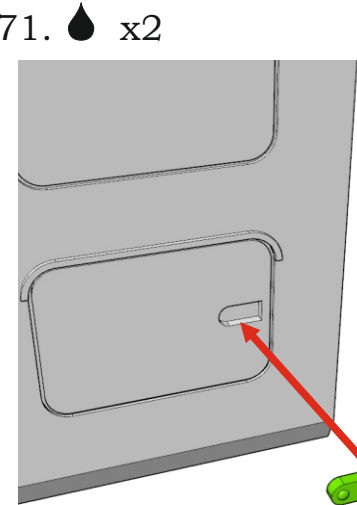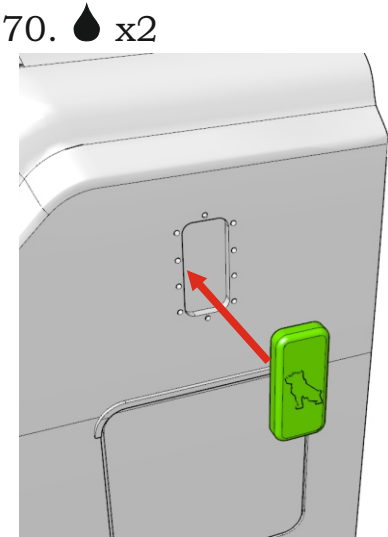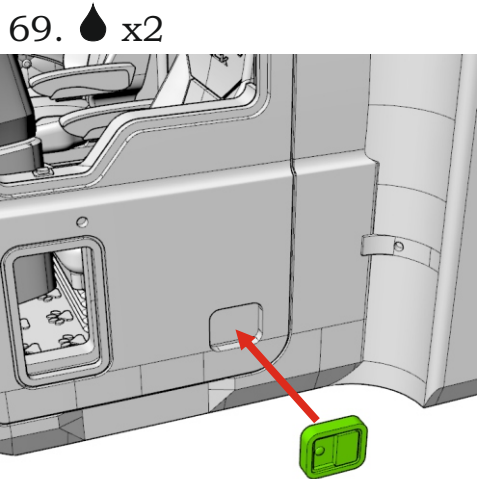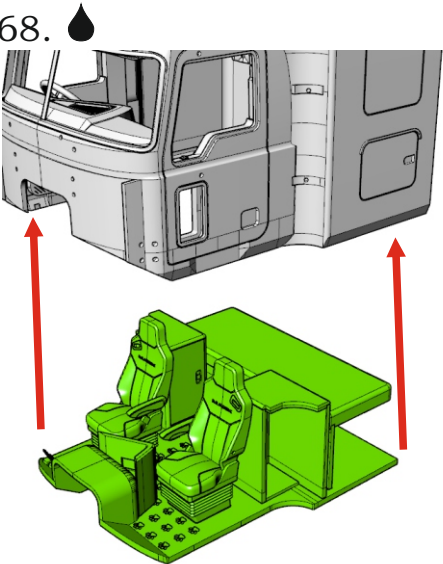



PE-parts #13, 14, 15


Aussie Titan truck (sleeper cab)

78. 

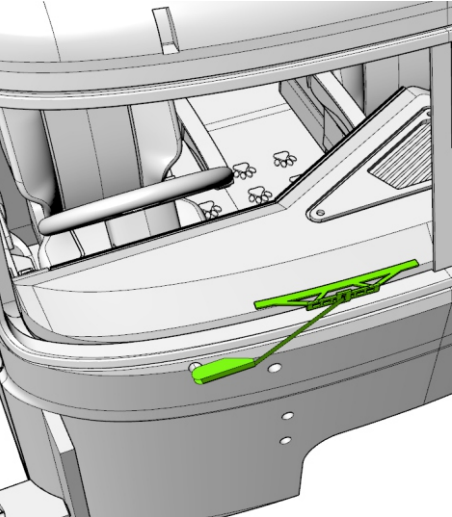
79. 

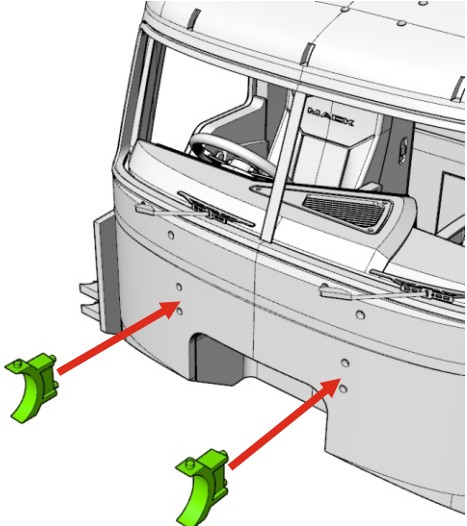
80. 

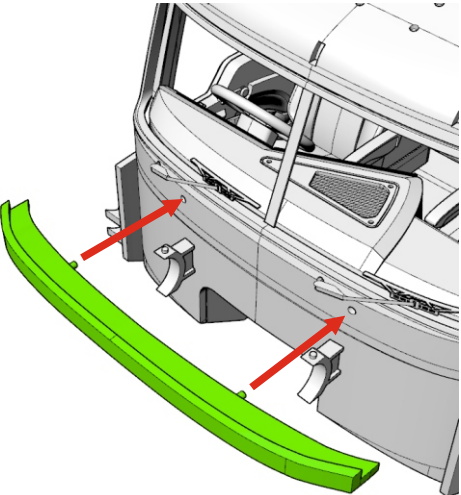

81. 

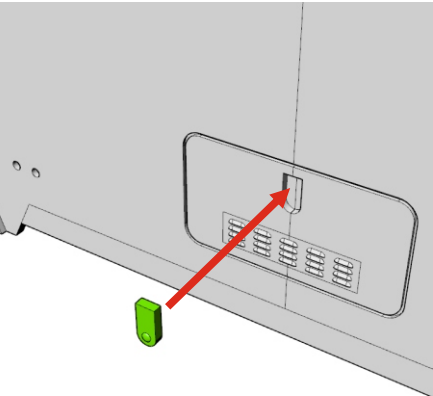

82.  x2


! C → 


! B → 


! A → 

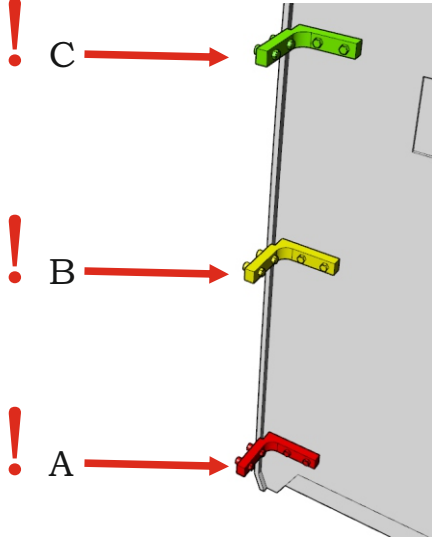
83.  x2

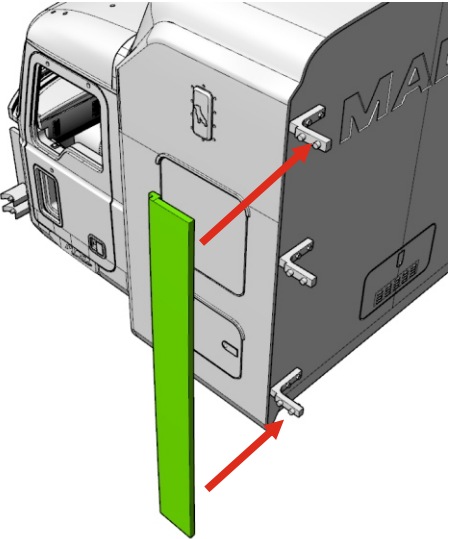
84.  x2

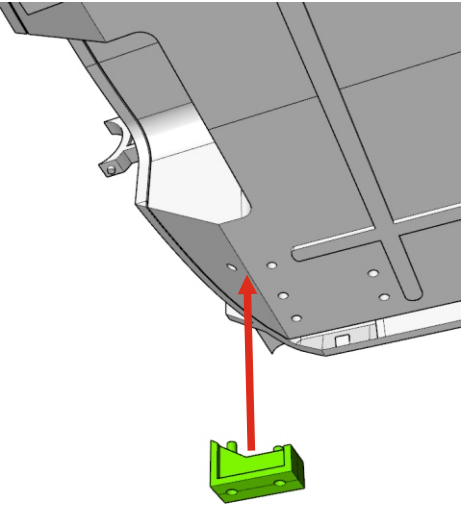

85.  x2

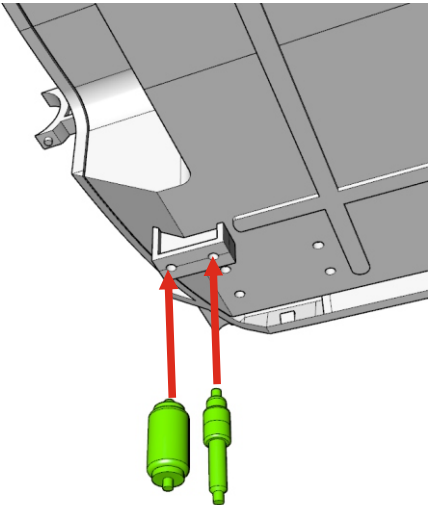
86.  x2

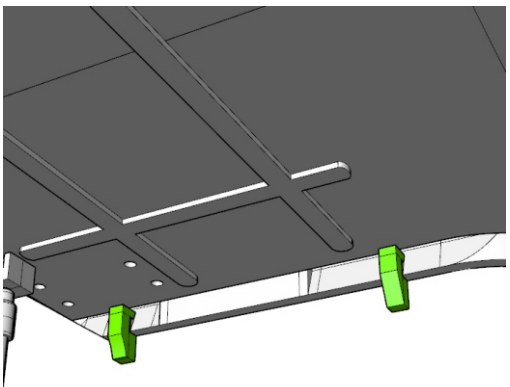


Aussie Titan truck (sleeper cab)


87.  x2

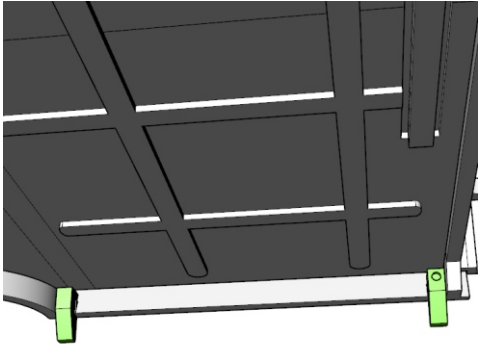


88.  x2

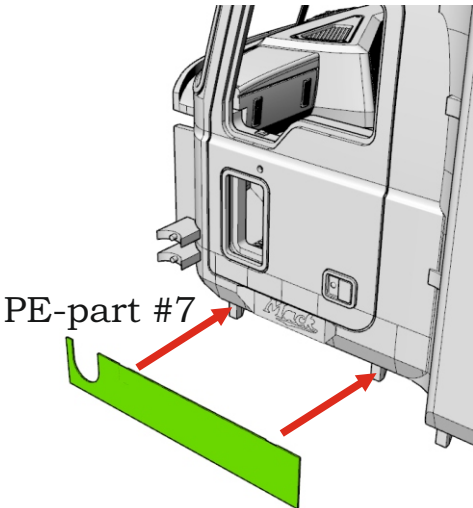



89.  x2

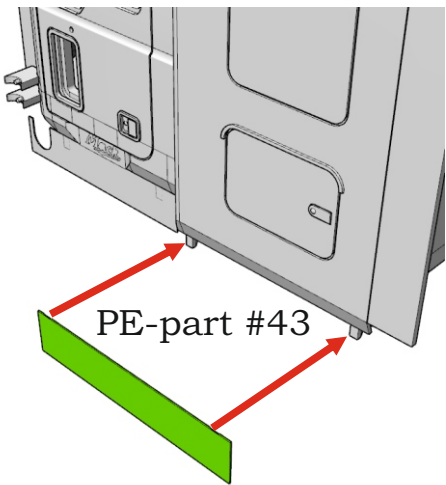

90.  x2

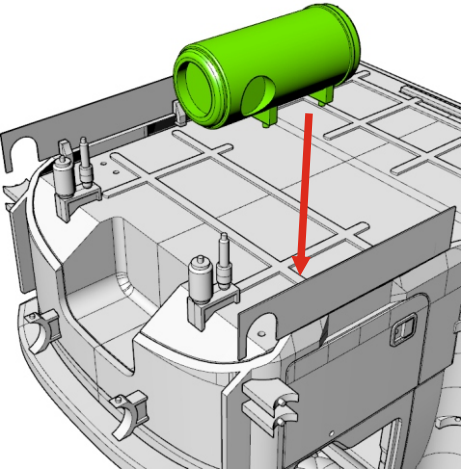



91. 

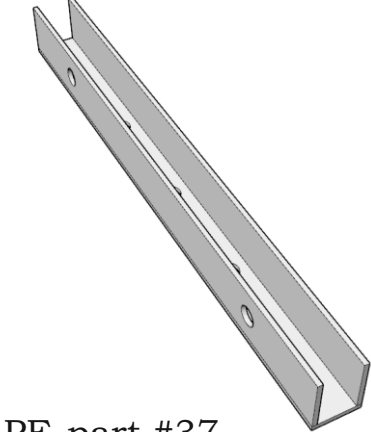


PE-part #37

92. 

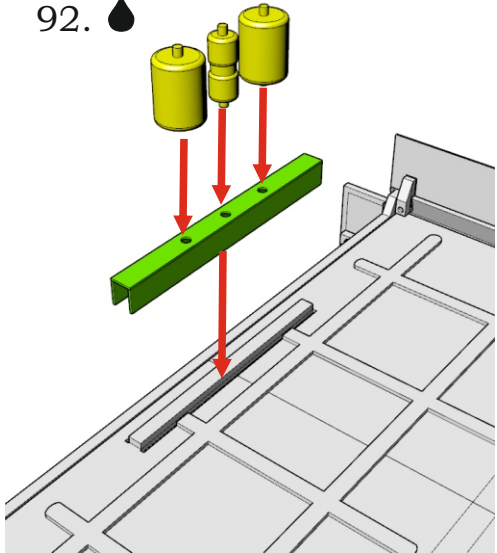


93. 

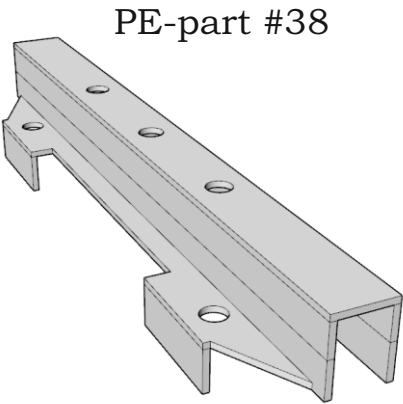


PE-part #38

94. 

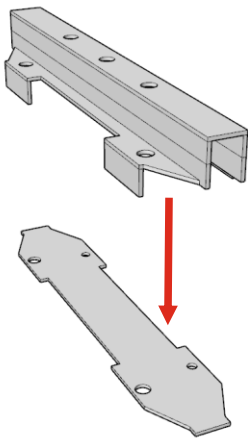


PE-part #39

95. 

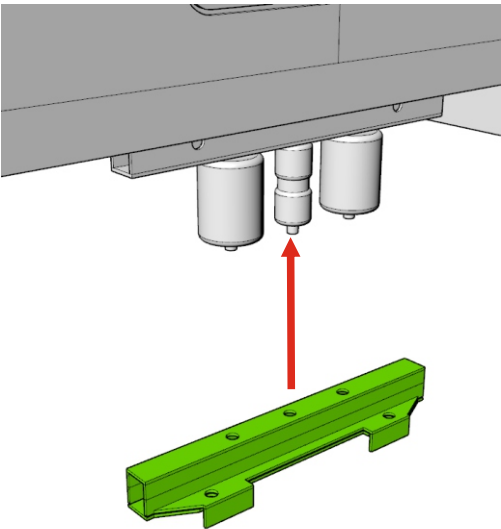


Aussie Titan truck (sleeper cab)


96. 

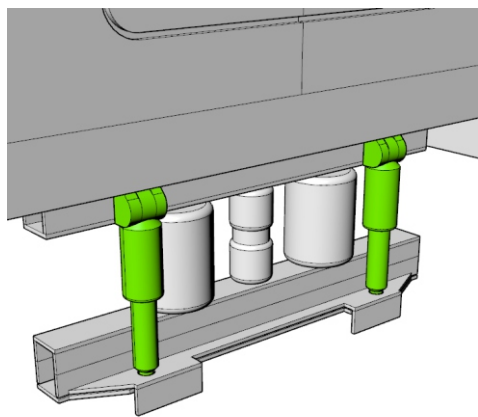


97.  x2

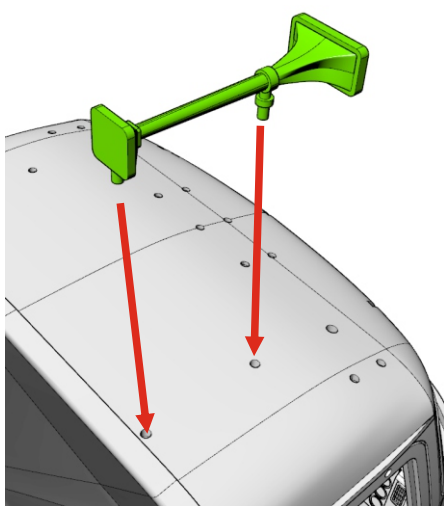


98.  x5

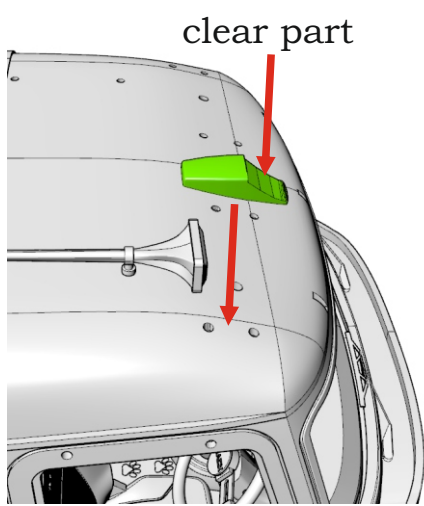


99.  x2

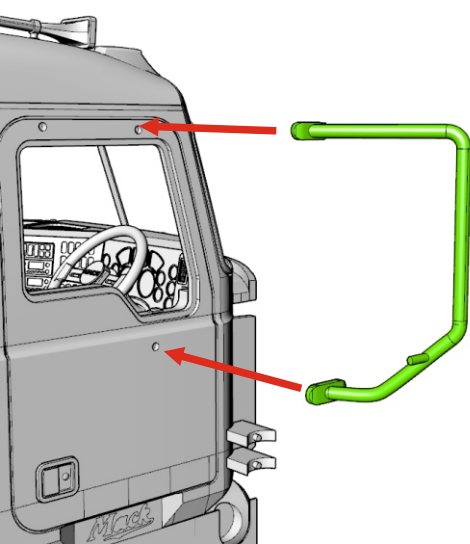


100.  x2

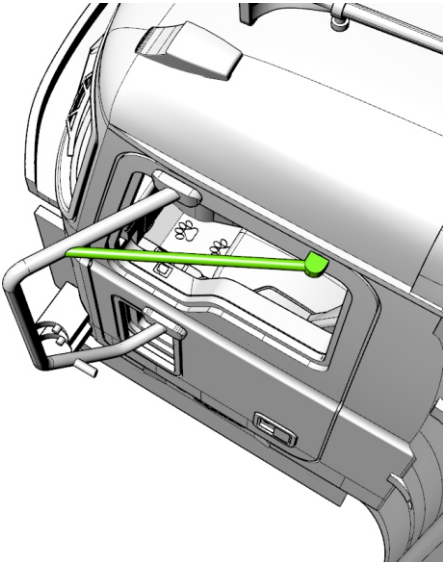


101.  x2

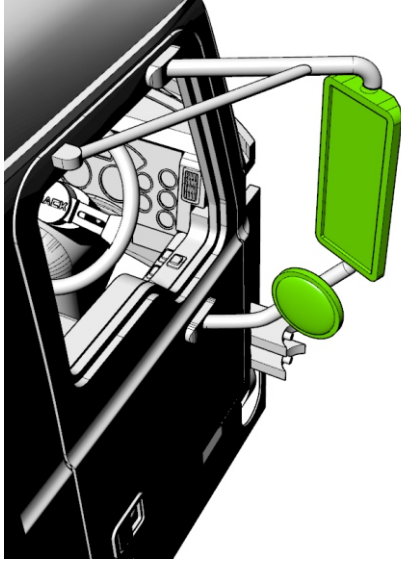


102. 

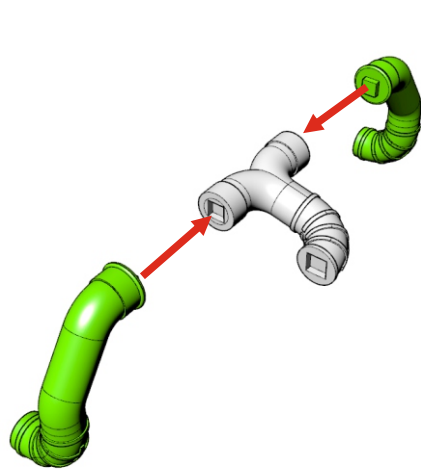

103. 

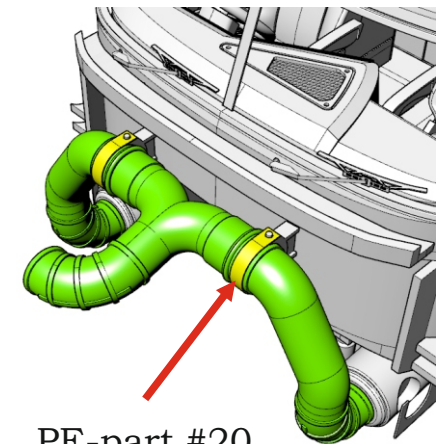

104.  x2

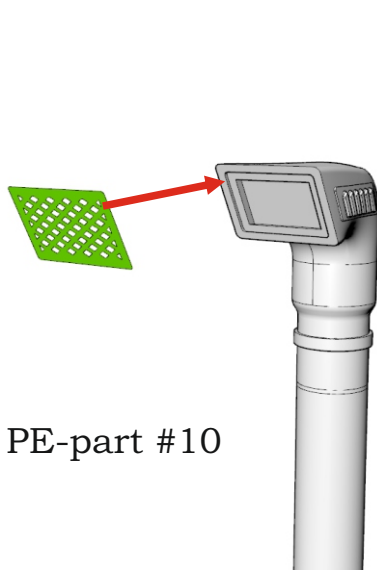


PE-part #20


PE-part #10

Aussie Titan truck (sleeper cab)


105.  x2

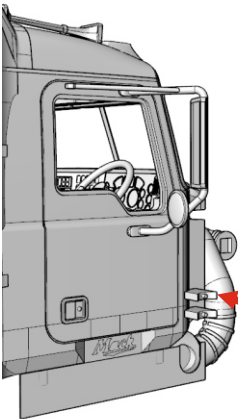

106.  x2

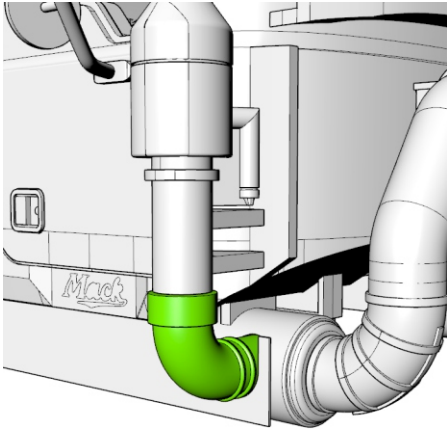


107.  x2
PE-part #1

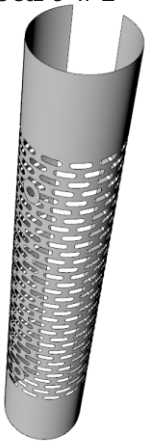


108. 


x2




109. 

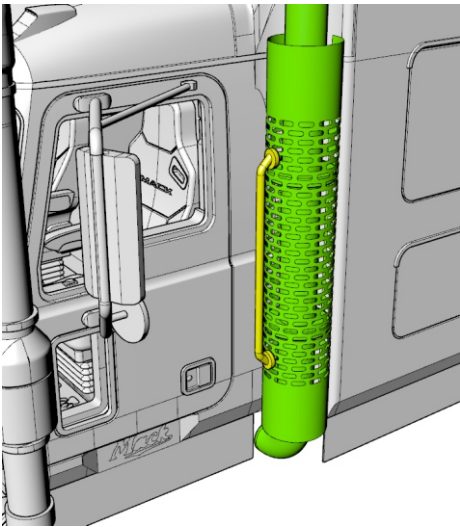




110. 

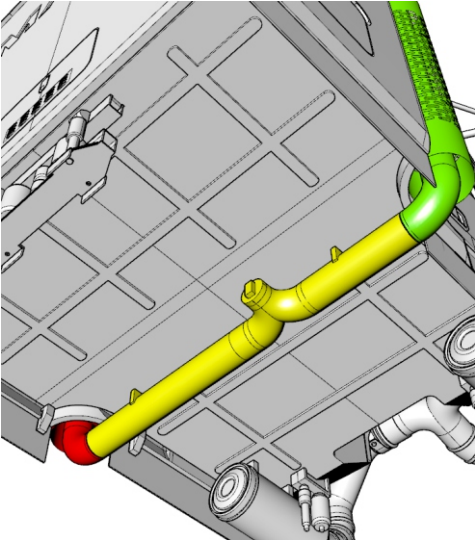

111. 

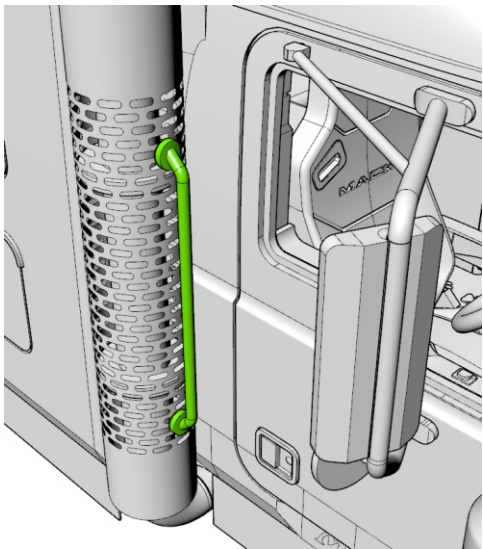


112. 

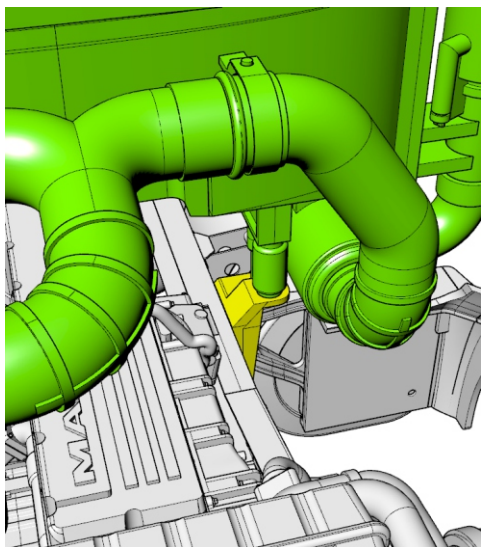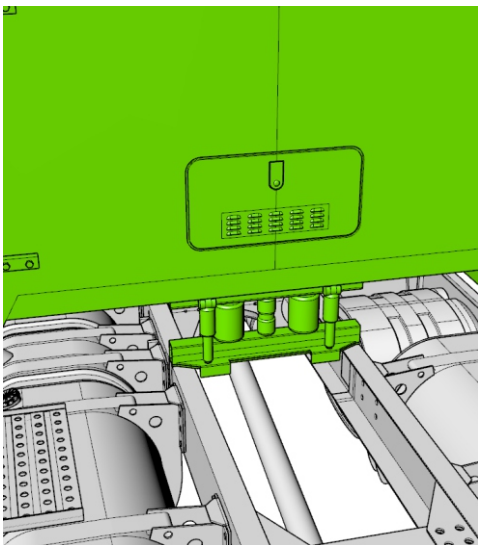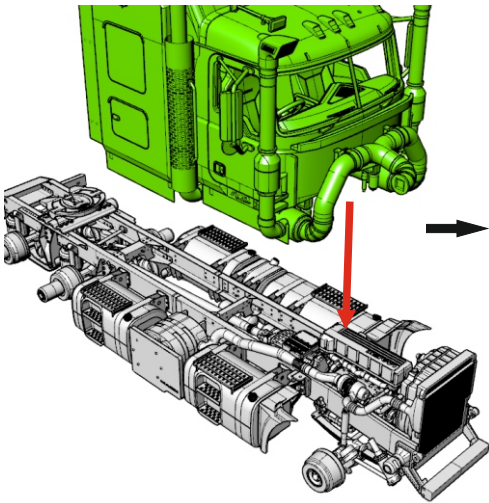


Aussie Titan truck (sleeper cab)


113. 

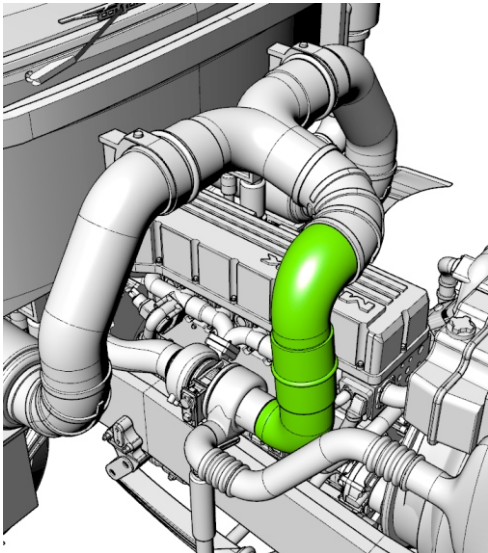

114. 

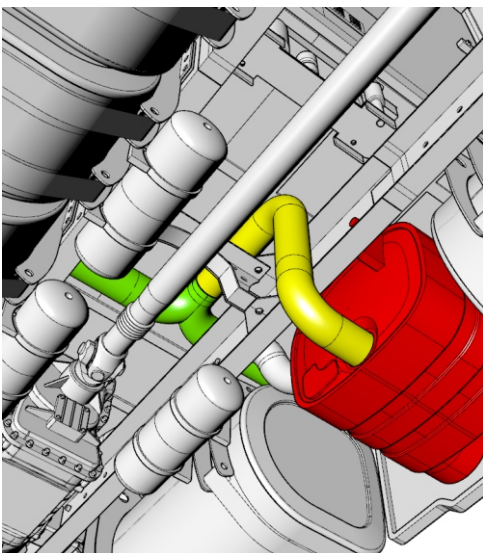


115. 

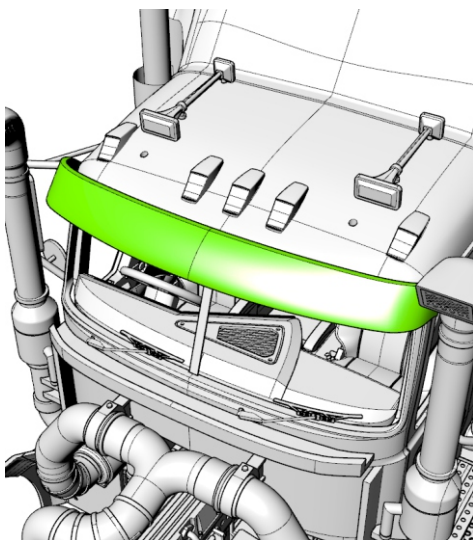


116. 


PE-part #34

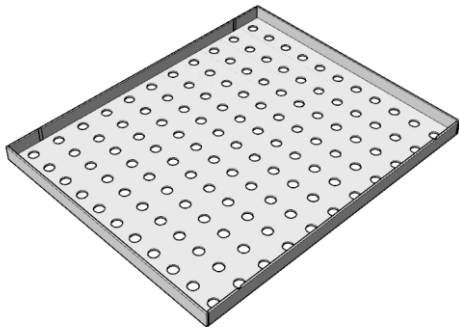


117. 

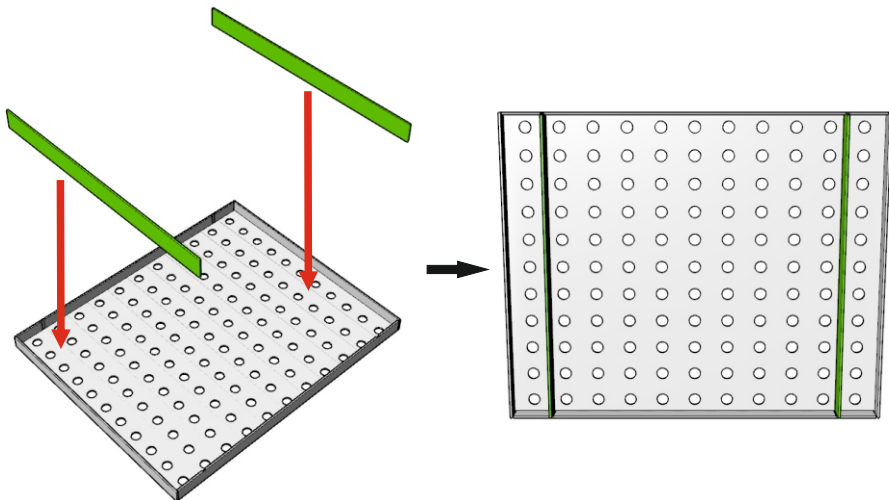


118. 

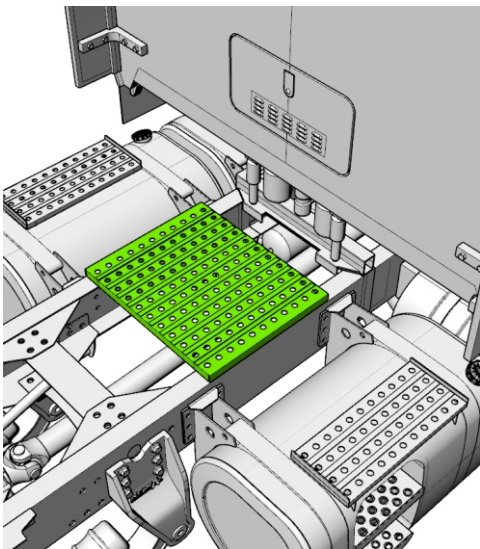

119.  x2

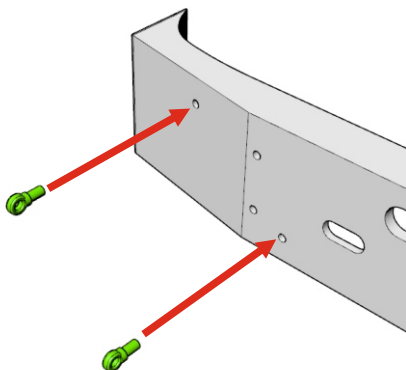


120. 

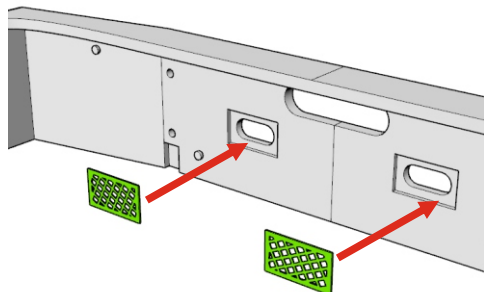


PE-part #11

Aussie Titan truck (sleeper cab)


121.●

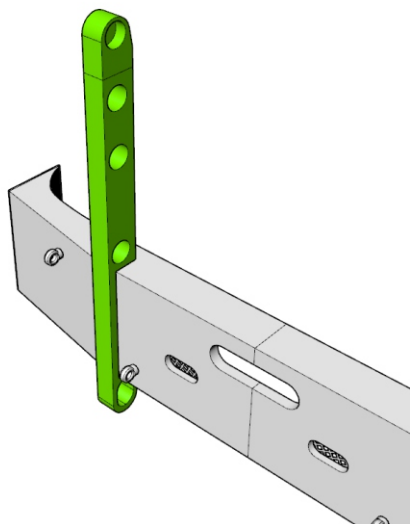


122.⌵

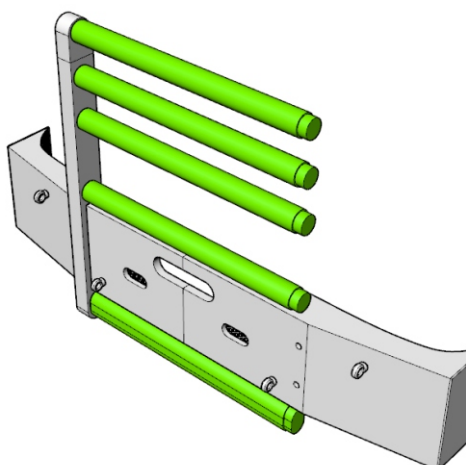


123.●

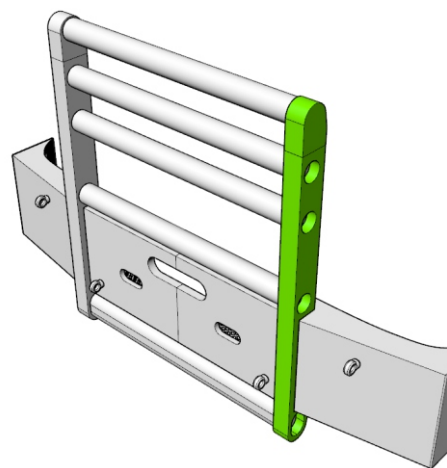

124.⌵ x2

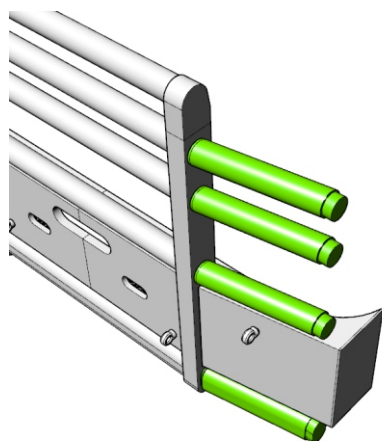


125.●

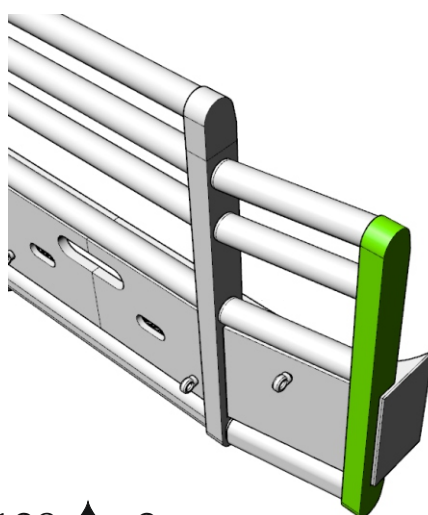


126.→ x2


PE-part #36

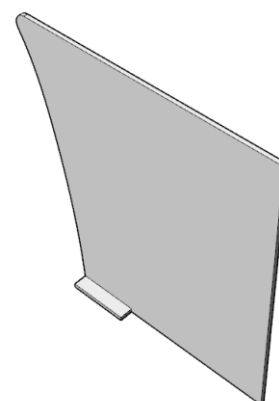


127.● x2

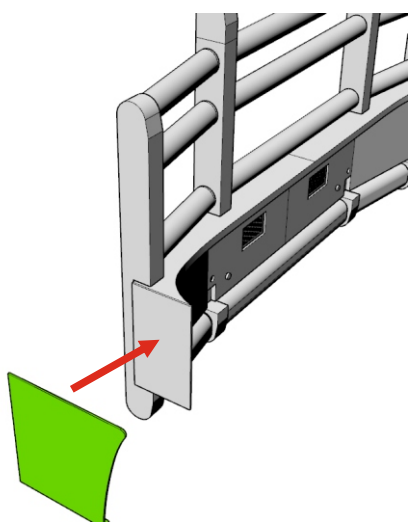

128.● x2

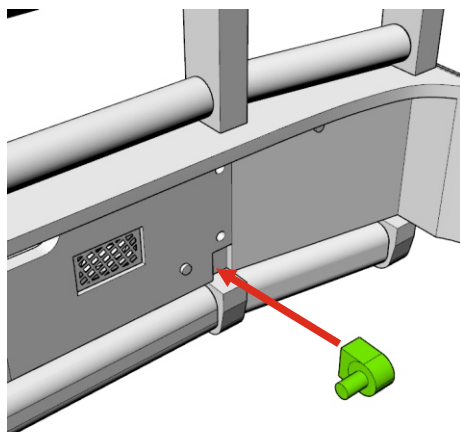

129.⌵

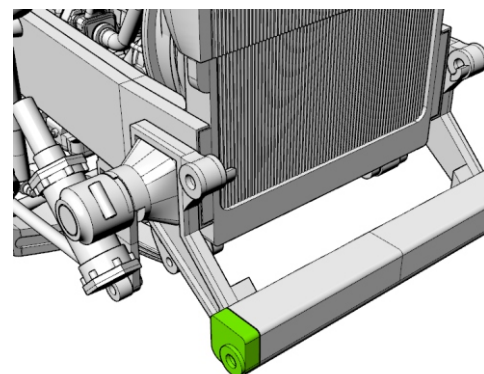


Find correct position of the part, then remember, what part is left and what part is right.


USE CORRECT PART FOR CORRECT SIDE!

Aussie Titan truck (sleeper cab)


130.✂

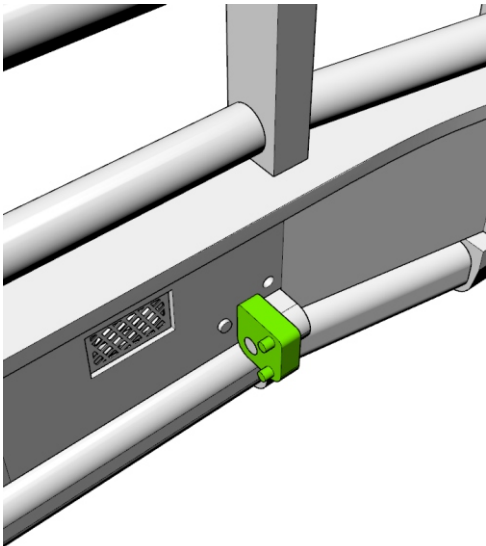

131.💧

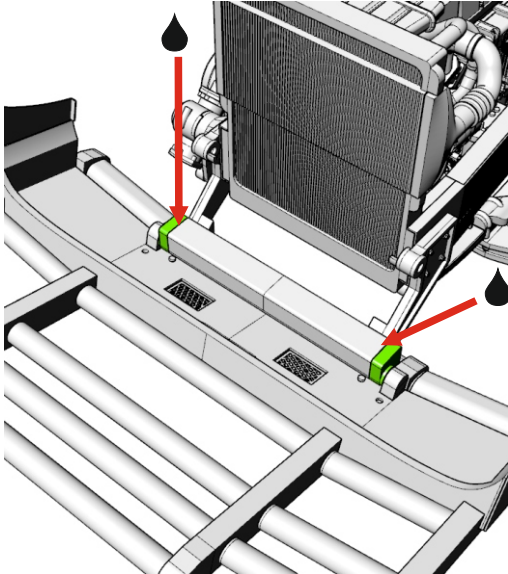


132.➡ x2

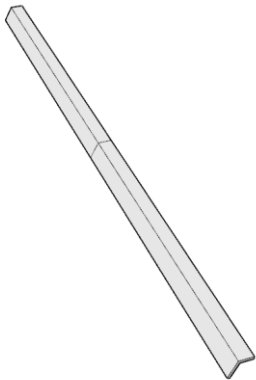

PE-parts #2, 3, 4, 5

133.💧

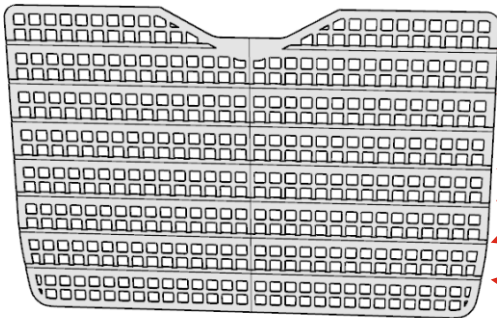

PE-part #2


PE-part #3

PE-part #4


PE-part #5

PE-part #6

134.💧

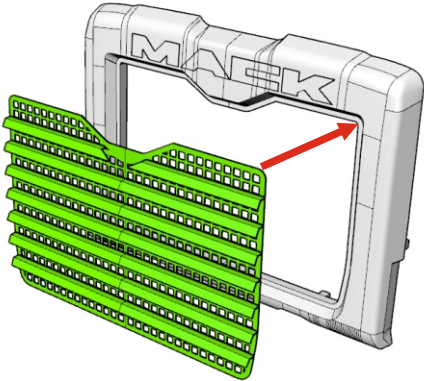


135.💧

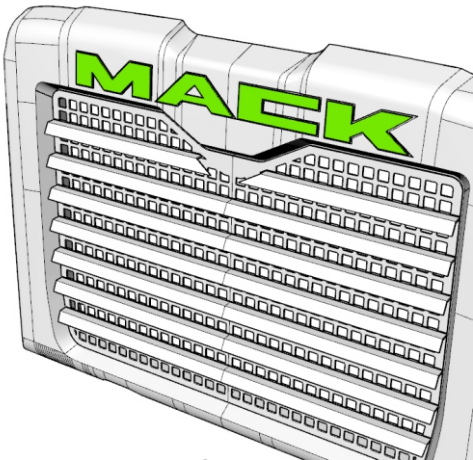


PE-parts #8

136.💧 x2

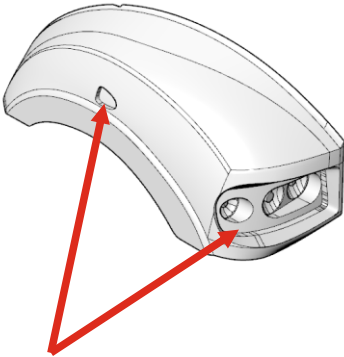


clear parts

137.💧 x2

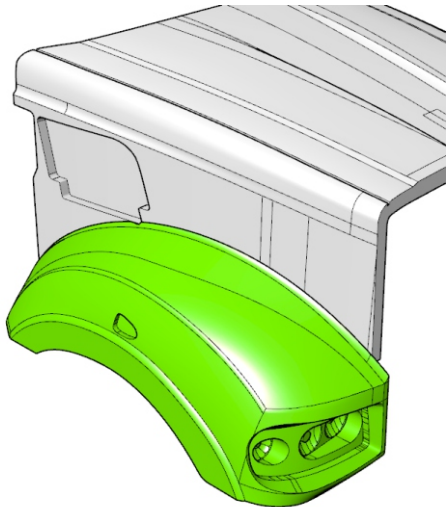


Aussie Titan truck (sleeper cab)


138.  x2

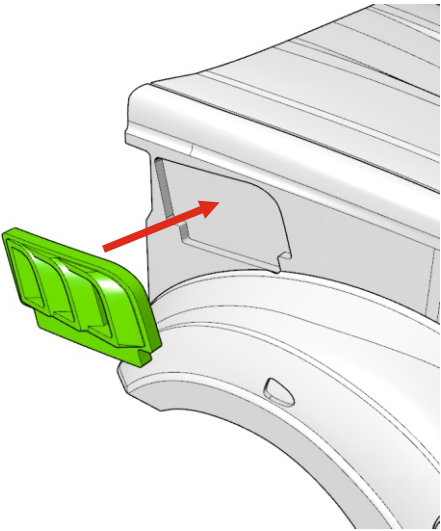


139. 

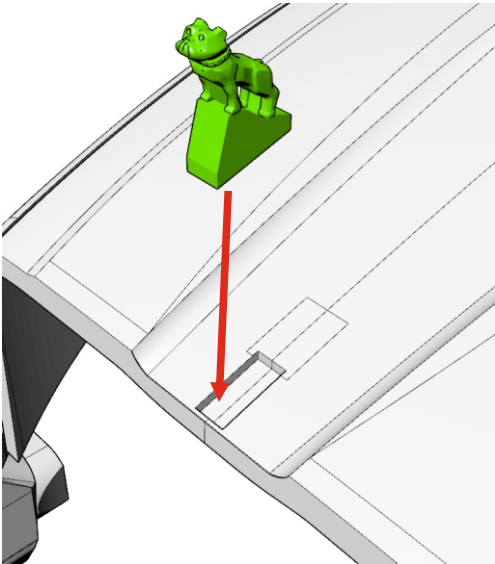


140. 

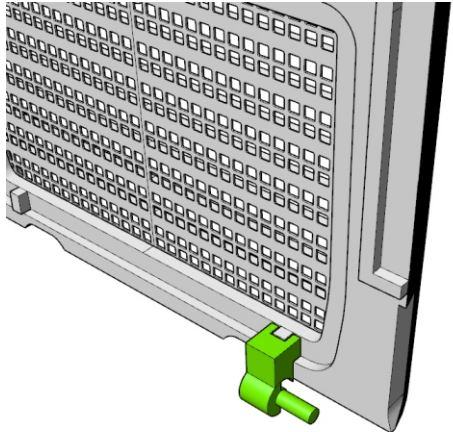


141. 

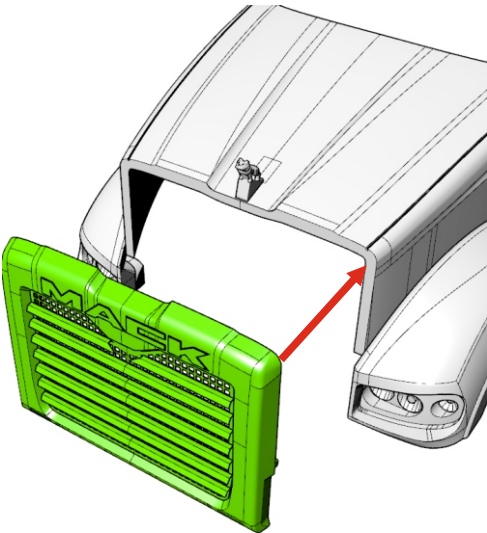

142. 

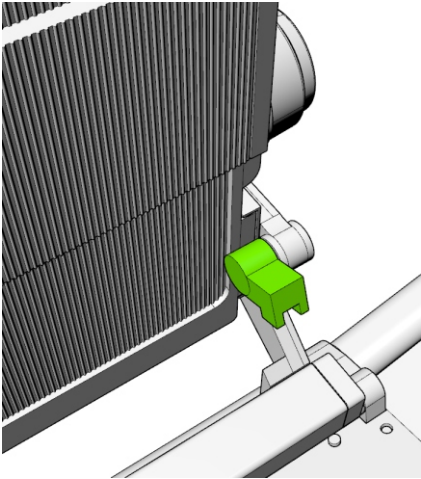

143. 

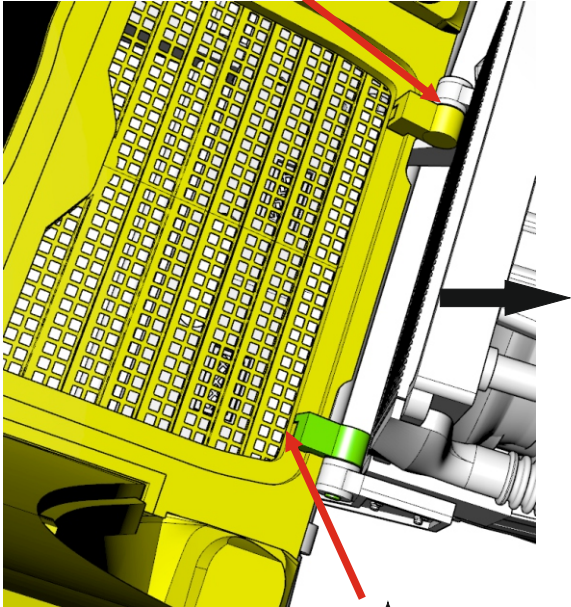

144.  x2

